

S5

Rodless cylinders with integrated slide - \emptyset 25÷50 mm Technopolymer sliding guide

- Extruded aluminium profile Ø 25÷50 mm
- Stroke length up to 6m
- Flexible guiding system
- Sliding of carriage by means of plastic slides on steel rods
- Translation speed 0,2÷1,5 m/sec
- Version with locking unit available upon request





TECNICHAL CHARACTERISTICS

Ambient temperature	-20÷80 °C
Fluid	filtered air, with or without lubrication
Working pressure	3÷10 bar
Bores	Ø 25 - 32 - 40 - 50 mm
Cushionings	adjustable on both sides

CONSTRUCTIVE CHARACTERISTICS

End-cap	die-cast aluminium
Barrel	anodized aluminium
Piston	aluminium
Guide slide	acetalic resin
Piston seal	double lip nitrile rubber (NBR)
Shock absorber seals	nitrile rubber (NBR) on both sides

CODIFICATION KEY

S	5	0	1	1	2	5	0	8	5	0
1		2	3	4	5			(5	

1 Series 55 = Ø 25÷50 mm - Rodless cylinders with integrated guides

Technopolymer sliding guide


- 2 Carriage type
 - 2 = Medium carriage

 $\mathbf{0}$ = Standard carriage (except \emptyset 40 - 50 mm)

3 = Long carriage

Technopolymer sliding guide



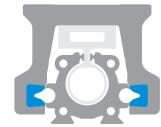

S5 with L6 locking unit



3 Left end-cap supply port

- 0 = No supply port (both chambers are supplied from the right end-cap)
- 1 = Side supply port
- 2 = Bottom supply port
- **3** = Rear supply port

4 Right end-cap supply port 5 Bore (mm) 6 Stroke (mm)

Right end-cap supply port	5 Bore (mr
1 = Side supply port	25 = Ø25
2 = Bottom supply port	32 = Ø32
3 = Rear supply port	40 = Ø40
4 = Rear supply ports for both chambers	50 = Ø50
on the right end-cap	

Up to **6000**

Subject to change RODLESS CYLINDERS 1.6



Stroke tolerances

Ø	mm
25	+2,5 - 0
32	+3,2 - 0
40	+3,2 - 0
50	±3.2 - 0

Cylinder massCylinder massCylinder massStandard carriageMedium carriageLong carriage

Ø	Cylinder - stroke 0	Increase for 100 mm stroke	Cylinder - stroke 0	Cylinder - stroke 0
	g	g	g	g
25	1625	365	1930	264
32	2775	495	3265	465
40	-	920	6095	860
50		1280	10030	14040

Theoretical forces (N) at different working pressure (bar) Static load value (N) and torque (Nm)

Please note that in dynamic conditions, the load must be reduced due to effects associated with the speed.

A moment is the product of the load (Newton) and the arm (meters), i.e the distance between the centre of gravity of the load and the longitudinal axis of the piston.


Force
Load
Bending moment
Torque
Bending moment

Maximum carriers

And improving a Madium carriers

Force	Load			Standard carriage			M	edium carria	ge	Long carriage			
F (N)	P1 (N)	P2 (N)	P3 (N)	M1 (Nm)	M2 (Nm)	M3 (Nm)	M1 (Nm)	M2 (Nm)	M3 (Nm)	M1 (Nm)	M2 (Nm)	M3 (Nm)	
250		400		13	8	16	20	10	25	40	15	50	
420	400		20	9	27	30	12	40	55	18	75		
640	600		-	-	-	60	30	80	110	45	150		
1050		800		-	-	-	85	50	110	150	75	210	
	F (N) 250 420 640	F P1 (N) 250 420 640	F P1 P2 (N) (N) 250 400 420 400 640 600	F P1 P2 P3 (N) (N) (N) (N) 250 400 400 640 600	F P1 P2 P3 M1 (Nm) 250 400 13 420 400 20 640 600 -	F (N) P1 (N) P2 (N) P3 (N) M1 (Nm) M2 (Nm) 250 400 13 8 420 400 20 9 640 600 - -	F (N) (N) (N) (P) (N) (N) (N) (N) (N) (N) (N) (N) (N) (N	F (N)	F (N) P1 (N) P2 (N) P3 (N) M1 (Nm) M2 (Nm) M3 (Nm) M1 (Nm) M2 (Nm) 250 400 13 8 16 20 10 420 400 20 9 27 30 12 640 600 - - - 60 30	F (N) P1 (N) P2 (N) P3 (N) M1 (Nm) M2 (Nm) M3 (Nm) M3 (Nm) M3 (Nm) M2 (Nm) M3 (Nm) M2 (Nm) M3	F (N) P1 (N)	F (N) P1 (N)	

Fixing elements and accessories

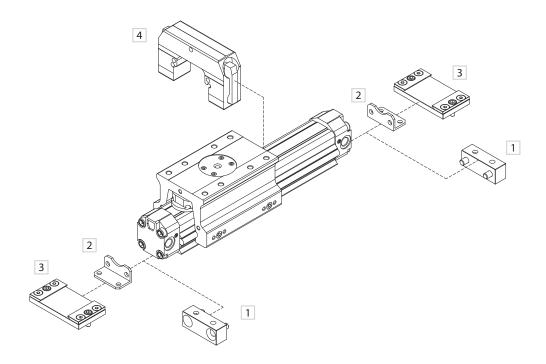


DESC	RIPTION	NOTE	PART NO.
1 Bracke	et Ø40-50	Anodized aluminium	SF-13
2 Angle	bracket Ø25-32	Zinc-plated steel	SF-13
3 Fixing	plate	Zinc-plated steel	SF-12
4 L6 lock	king unit	-	L6-S5

Subject to change



Rodless cylinders with integrated guides and standard carriage - 8 fixing holes

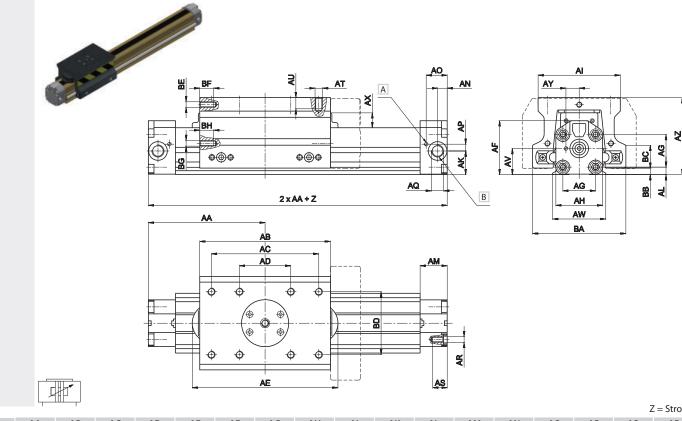

																4	: = Stroke
Ø	AA	AB	AC	AD	AE	AF	AG	AH	Al	AK	AL	AM	AN	AO	AP	AQ	AR
25	100	106	90	50	130	48,3	28	40,5	70	20,2	7	24	7,4	18,2	5,7	G1/8	M5
32	125	140	115	55	156	57	35	50	88	25,3	8	29	10,3	22,5	7,3	G1/4	M6
40	-	-	-	-	-	-	44	64	90	33,8	11,8	33	12,5	26,5	8,7	G3/8	M8
50	-	-	-	-	-	-	55	80	100	41,4	14,7	33	14,2	25,7	11,8	G3/8	M10
Ø	AS	AT	AU	AV	AW	AX	AY	AZ	BA	BB	BC	BD	BE	BF	BG	BH	
25	12	M6	10	22,8	42,8	16	12,2	71,8	85	5,7	24	50	15	M6	M6	15	
32	15,5	M6	12	28	57	16	14,2	82,5	100	7	24,5	67,5	15	M6	M6	15	
40	20	M8	14	37	67	19,5	16,5	106,6	135	7	39	65	15	M6	M6	15	
50	20	M8	16	47,7	86	20,5	19,1	123,7	149	7,2	41	76,5	16	M8	M6	15	


Dimensions of the L6 locking unit are indicated by dotted lines; for the fixing holes of the locking unit, see dedicated chapter. For Ø 40 - 50 the standard carriage is not available

- A Pneumatic cushioning adjusting screw
- B Side supply port




Rodless cylinder with integrated guides and medium carriage - 8 fixing holes



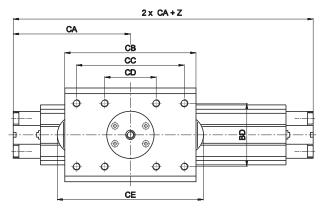



Rodless cylinder with integrated guides and long carriage - 12 fixing holes

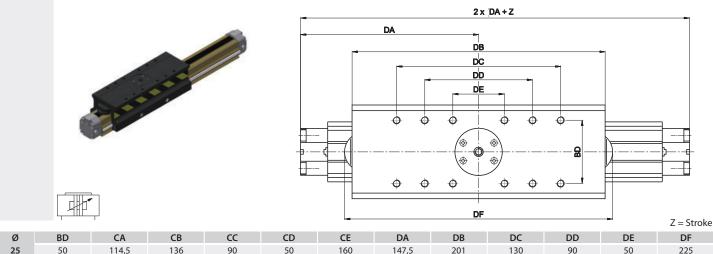


114,5 147,5 67,5 142,5 76,5

Fixing plate



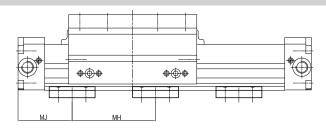

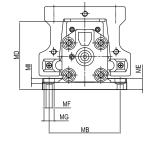

	A A	MM MN
	*	
•	• •	→ ME

waterial.		Ziric piates	a steel												
Cylinder	MA	MB	MC	MD	ME	MF	MG	MH	MI	MJ	ML ^(b)	MM	MN	Mass	Part no.
Ø														g	
25	78,5	63,5	50	79,8	12	M8	11	500 ^(a)	6,5	55	65,5	30	M6	310	SF-12025
32	92	77,5	50	90,5	12	M8	11	600 (a)	8,5	60	79,5	30	M6	340	SF-12032
40	117	96	60	116,6	15	M10	14	700 (a)	8	70	96	37,5	M8	660	SF-12040
50	136	115	60	133,7	15	M10	14	800 (a)	8	70	115	37,5	M8	700	SF-12050
30	130	113	00	155,7	13	IVIIO	17	000 ()	U	70	113	57,5	1010	700	31 12030


(a) = Max allowable dimension to limit the bending of cylinder according to the stroke and to provide a correct fixing


7inc-plated steel


Material:


⁽b) = For Ø 40 - 50 mm, MB and ML dimensions are the same

Angle bracket








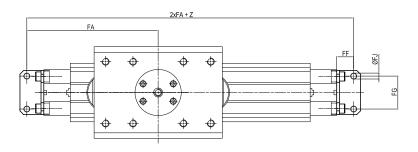



Material:	Zinc-plated steel
-----------	-------------------


Cylinder	FA	FB	FC	FD	FE	FF	FG	FH	FI	FJ	Mass	Part no.
Ø										Ø	g	
25	116	58,1	48,8	40	0,5	16	27	22	2,5	5,5	34	SF-13025
32	143,5	68,7	59,2	48	2,5	18,5	36	26	3	6,5	53	SF-13032

Bracket



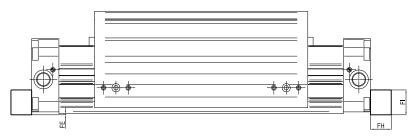

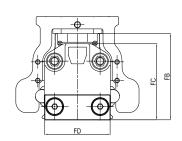

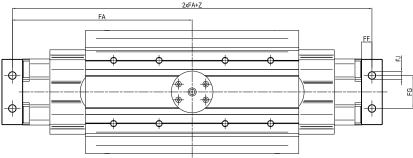

Material: Anodized aluminium

Cylinder	FA	FB	FC	FD	FE	FF	FG	FH	FI	FJ	Mass	Part no.
Ø										Ø	g	
40	162,5	86,5	74,9	63	0,7	12,5	30	25	25	9	116	SF-13040
50	187.5	104.3	92.4	79	1.3	12.5	40	25	30	9.3	170	SF-13050



EXAMINATION AND VERIFICATION OF THE CUSHIONING


In a system with moving masses, as in the case of rodless cylinders, it is essential to control the dissipation of the system's kinetc energy as it is brought to a stop. First of all, it is necessary to establish and verify the most suitable method for cushioning the system, in order to avoid the moving mass (carriage with load) striking against the end-caps and compromising the life of the cylinder.

If the point corresponding to a given load and speed lies beneath the appropriate curve, the cushioning is able to absorb the kinetic energy of the system.

Vice versa if the point lies above the curve, the cushioning is not able to absorbe the kinetic energy. In that case you must:

- a) decrease the load and mantain the translation speed
- b) decrease the speed and mantain the load
- c) select a cylinder with a bigger bore or with twin chambers


The cushioning capacity is shown in the diagram below, referenced to the final speed as the carriage approaches the end-caps for S1- S5 - VL1 series

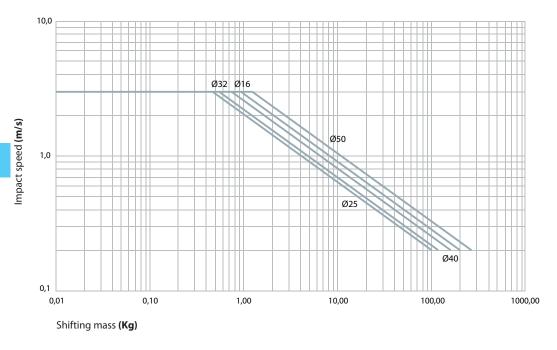

As a result, if cushionings can not absorb the kinetic energy and changing the working parameters is not possible, it is necessary to provide an additional hydraulic shock absorber (YDA / YDR series) to reduce the load speed before the cushionings operate.

ER GROUP

DYNAMIC LOAD CAPACITY

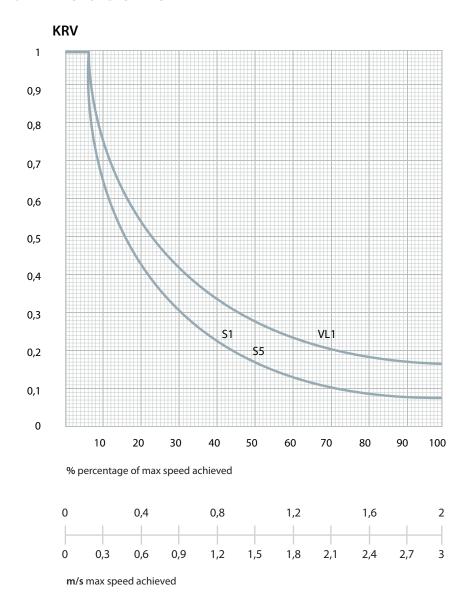

1) Calculation of the operational speed percentage in relation to the max allowable speed:

% =
$$\frac{\text{Operational speed (m/s)}}{\text{Max. allowable speed (m/s)}} \cdot 100$$

2) Apply the following formula for the calculation of the max. dynamic load:

$$CD = CM \cdot KRV$$

CD = Max. dynamic load (N)

CM = Max. static load (N). See relevant load tables for the various series

KRV = System coeff icient (which acts to reduce the max. load based on the system speed)

Subject to change


CYLINDER SELECTION

As previously discussed, it is necessary to produce (for a correct use of the cylinder) a gradual deceleration of the moving mass.

CYLINDER WITH LOAD MOUNTED DIRECTLY ON THE CARRIAGE (picture A)

Let us consider the case of a S1 series cylinder with a load of 50 N placed on the carriage, at the max. translation speed of 1,2 m/s., as shown in the picture. Verify the cushioning capacity and calculate the capacity of the dinamic load and of the torque and bending moments.

P = 50 N **V** = 1,2 m/s. **b1** = 110 mm



VERIFICATION OF THE CUSHIONING CAPACITY

According to the graph shown on page 22 a 50 bore size cylinder is able to absorb the developed kinetic energy developed by the application in the picture above, since the intersection point corresponding to the speed and load lies beneath the cushioning curve.

VERIFICATION AND CALCULATION OF THE DYNAMIC LOAD CAPACITY

Using the equation 1, we can calculate the percentage between the operation speed and allowable speed.

% =
$$\frac{\text{Operation speed (m/s)}}{\text{Allowable speed (m/s)}} \cdot 100 = \frac{1.2 \text{ m/s.}}{3 \text{ m/s.}} \cdot 100 = 40\%$$

From the graph given on page 23 we can determine the KRV (coefficient of speed reduction)

$$KRV = 0,24$$

Applying the equation 2 on page 23 we can determine the max. permitted dynamic load.

$$CD = CM \cdot KRV$$

CD = Dynamic load


CM = Static load 500 N (see table for S1 50mm cylinder series - P1 page 3)

As P (50 N) < CD (120 N) the S1 series 50 bore cylinder is suitable for the application

CARRIAGE STRESSES

Different load applications have different moments M1 - M2 - M3, which directly infl uence the life of the cylinder. By selecting a cylinder that can support off-set loads, we can avoid compomising the cylinder life.

Load must be applied, if possible, so that it acts through the centre point B (see picture).

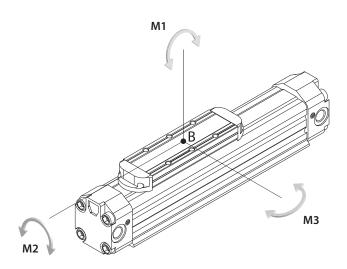

CALCULATION OF THE TORQUE M1 - M2 - M3

In order to calculate the various moments, which act on the carriage, we must calculate the force, generated by the load, when it is subjected to accelerations and decelerations.

$$a = \frac{V^2}{2 L \cdot 10^{-3}} = (m/sec.^2)$$


a = Acceleration/deceleration

V =Speed in m/s.

L = Cushion length in mm

CUSHION LENGTH

Ø	L					
	mm					
16	16,5					
25	25					
32	32,5					
40	41,5					
50	52					

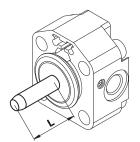

$$a = \frac{1.2^2}{2 \cdot 52 \cdot 10^{-3}} = 13.8 \text{ (m/sec.}^2\text{)}$$

$$F = m \cdot a$$

$$\mathbf{F} = \text{Force}$$
 $\mathbf{m} = \text{Mass} (P/9,81)$

$$F = \frac{50}{9,81} \cdot 13,8 = 70 \text{ N}$$

$$M1 = F \cdot b1$$

The example A on page 24 is subjected to the moment M1 as the load decelerates through the cushion.

M1 = Torque

b1 = Distance between the centre of gravity of load P and the centre of gravity through the cylinder centre line (see picture A on page 24)

$$M1 = 70 \cdot 110 = 7700 \text{ Nmm} = 7,7 \text{ Nm}$$

The equation gives the following result:

M1 = 7.7 Nm < 19 Nm (see table for S1 50mm cylinder series - M1 page 3)

Thus S1 series, bore size 50, with standard carriage is suitable for the movement of the load in the given conditions. If the calculated value is equal to or higher than the value given in the table, it is necessary to select a different size of carriage, or a different type of rodless cylinder (e.g with integrated slide)

ATTENTION!

If the translation speed of example A is 2 m/s instead of 1,2 m/s, the cushioning capacity of the cylinder, given in the example, will not be enough to absorb the kinetic energy generated by the moving load.

Therefore it is necessary to reduce the translation speed before reaching the cushion, by means of shock absorbers until the value is 1,2 m/s (for example).

SIZING OF A POSSIBLE HYDRAULIC SHOCK ABSORBER

The hydraulic shock absorber must be mounted, so as to strike the centre of gravity of the load.

$$Ec = \frac{1}{2} \cdot m \cdot V^2$$

Ec = Kinetic energy

m = Mass (P/9,81)

V = Translation speed (2 m/s)

P = Weight 50 N

9,81 = Acceleration of the centre of gravity

Ec =
$$\frac{1}{2} \cdot \frac{50}{9,81} \cdot 2^2 = \frac{200}{19,62} = 10 \text{ Nm}$$


In this case the hydraulic shock absorber must have a capacity greater than or equal to 10 Nm.



CYLINDER WITH MISALIGNED LOAD (picture B)

Let use suppose that we want to move a load of 50 N displaced at a distance B3 from the central axis, at a maximum translation speed of 1,2 m/s. Due to the misaligned load a cylinder with an external carriage is required and we must verify if a S5 cylinder with integrated slide is suitable for this application.

P3 = 50 NV = 1.2 m/sb2 = 150 mmb3 = 200 mm

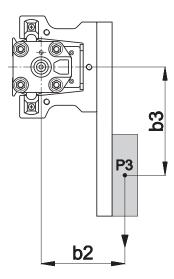

VERIFICATION OF THE CUSHIONING CAPACITY

The S5 series cylinder (graph on page 22), 40 mm bore, can absorb the kinetic energy developed by the 50 N load at a speed of 1,2 m/s.

VERIFICATION AND CALCULATION OF THE CARRIAGE MOMENTS

Using the equation we can calculate the percentage of the max. speed as follows.

% = Operational speed (m/s)
$$\cdot 100 = \frac{1.2 \text{ m/s}}{3 \text{ m/s}} \cdot 100 = 40\%$$

From the graph given on page 23 we can determine the KRV coefficient.

$$KRV = 0.24$$

Applying the equation 2 on page 23 we can determine the max. allowable dynamic load.

$$CD = CM \cdot KRV$$

CD = Dynamic load

CM = Static load 600 N (see table for S5 50mm cylinder series - P3 page 12)

$$CD = 600 \cdot 0,24 = 144 \text{ N}$$

As P3 (50 N) < CD (144 N) the S5 series 40 bore cylinder is suitable for the application.

CALCULATION AND VERIFICATION OF THE CARRIAGE MOMENTS

As load P is misaligned (B3) from the central axis of the cylinder, the carriage is acted on by a significant moment M3, so that it is necessary to use a cylinder with an external carrriage.

CALCULATION OF THE MOMENTS M1 - M2 - M3 AND CARRIAGE SELECTION

$$a = \frac{V^2}{2 L \cdot 10^{-3}} = (m/sec.^2)$$

a = Acceleration/deceleration

m = Mass (P/9,81)

F = Force

P = Weight in N

9,81 = Centre of gravity acceleration

L = Length in mm of the internal cushion (see on page 25)

V =Speed in m/s

$$a = \frac{1.2^2}{2 \cdot 41.5 \cdot 10^{-3}} = 17.3 \text{ (m/sec.}^2\text{)}$$

$$F = m \cdot a = \frac{P}{9,81} \cdot 17,3 = \frac{50}{9,81} \cdot 17,3 = 88 \text{ N}$$

The example is subjected to moments M1 - M2 - M3

$$M1 = F \cdot b2 = 88 \cdot 150 = 13200 \text{ Nmm} = 13,2 \text{ Nm}$$
 (M1 max 60 Nm)

$$M2 = P \cdot b2 = 50 \cdot 150 = 7500 \text{ Nmm} = 7.5 \text{ Nm}$$
 (M2 max 30 Nm)

$$M3 = F \cdot b3 = 88 \cdot 200 = 17600 \text{ Nmm} = 17,6 \text{ Nm}$$
 (M3 max 80 Nm)

By comparing the calculated values to the max values on page 12, it can be deducted that the medium carriage is suitable for this application.

CYLINDER WITH MISALIGNED LOAD IN VERTICAL POSITION


In this istance let use suppose to verify if a 40 mm bore VL1 series cylinder, in the vertical plane, is sufficient to move a 50 N load misaligned at a distance b3, at a speed of 1,2 m/s.

P = 50 N

V = 1.2 m/s

b1 = 110 mm (see picture A)

b3 = 200 mm

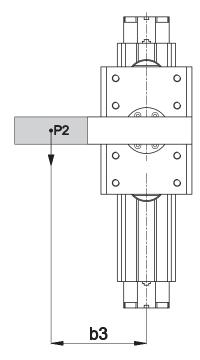



ATTENTION!

If the cylinder is vertically mounted, the cushioning capacity is reduced by 40%.

By checking the data given in the example, we note that the cylinder, in the vertical position, is not able to cushion the load and it is therefore necessary to use a 50 mm bore cylinder or an external shock absorber (see on page 26). Now we must calculate the dynamic load capacity and the developed moments. To obtain the value of the KRV coeeficient follow the procedure as given in the examples, which will result in a coefficient of KRV 0,24 (see pictures A and B).

$$CD = CM \cdot KRV = 1100 \cdot 0.24 = 264 N$$

P < CD

The cylinder is therefore able to move the applied load.

In this application the moment M2 is not generated, as no force is acting transversally to the moving axis; therefore we must calculate only the moments M1 and M3.

$$F = m \cdot a$$

$$a = \frac{V^2}{2 L \cdot 10^{-3}} = 17.3 \text{ (m/sec.}^2\text{)}$$
 (picture B)

$$F = m \cdot a = 88 N$$
 (picture B)

$$M1 = F \cdot b1 = 88 \cdot 110 = 9680 \text{ Nmm} = 9,68 \text{ Nm}$$
 (M1 max 120 Nm)

$$M3 = F \cdot b3 = 88 \cdot 200 = 17600 \text{ Nmm} = 17.6 \text{ Nm}$$
 (M3 max 120 Nm)

By comparing the obtained values with the maximum values in table at page 18, we can verify that the cylinder is proper, but in order to cushion the vertical load, we must either use an external cushion, increase the cylinder bore size or use another cylinder series.

FOR A CORRECT USE SEE THE FOLLOWING INSTRUCTIONS:

- 1. For a longer life of the cylinder it is suggested to use the cyliner at a speed of 1 m/s
- 2. If the cushioning value is in proximity to the max. value, please apply an additional shock absorber
- 3. If the cylinder is used vertically, the cushioning capacity is reduced by 40%.
- 4. Mantain a correct and constant lubrication.

Subject to change